




GBS Zero Underside View for Jacking and Stand Reference.

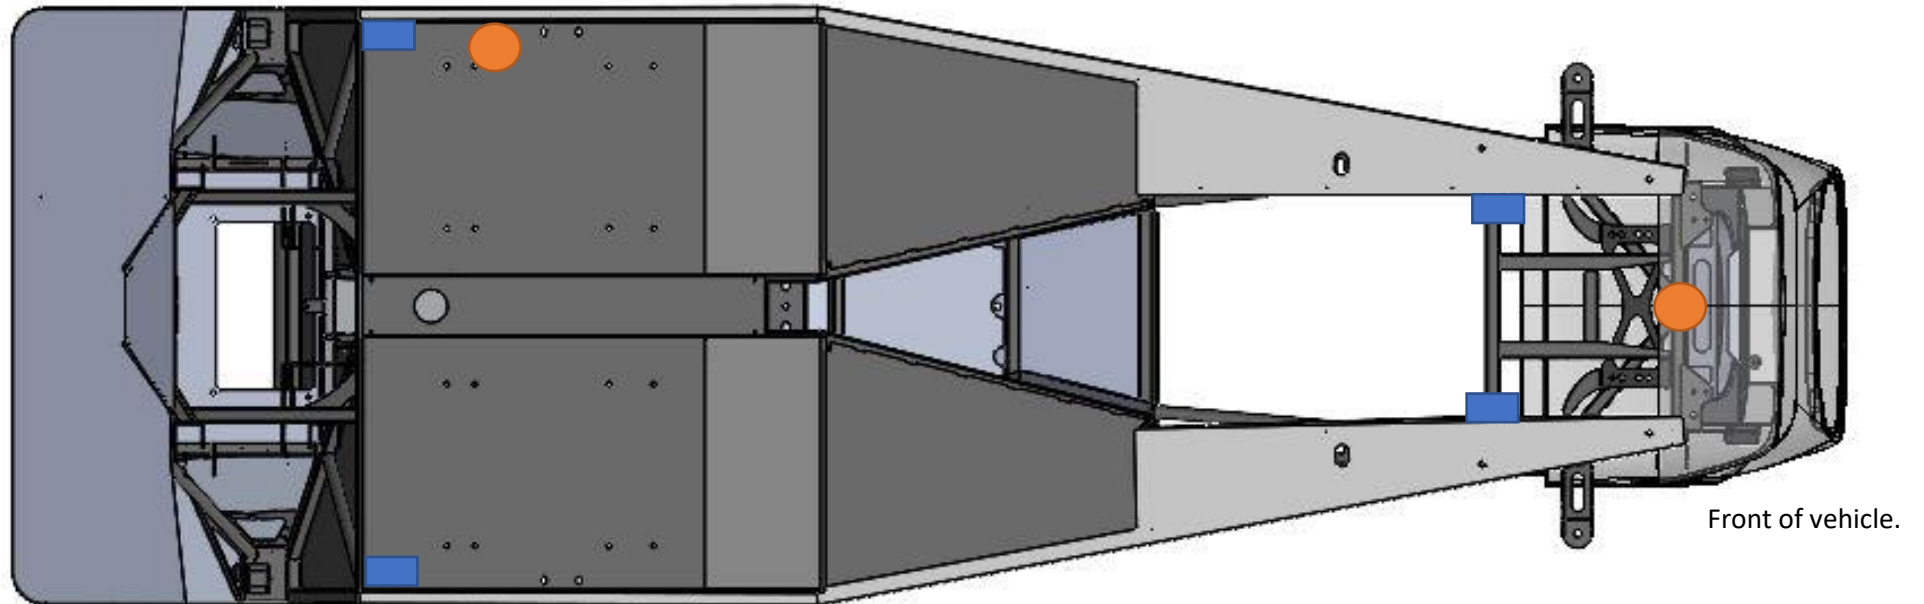

 Recommended Jack point

 Recommended Axle stand point

Please note; when jacking or using axle stands on the floor section of the Zero you must position the jack or stand near the edge (as shown above) to prevent floor deformation.