



GBS Factory Loom

pin outs for both column and instrument plugs

column switches	20 1	side +	2
column switches	20 2	side sw out	1
column switches	20 3	main beam flash / hazard +	0.5
column switches	20 4	head sw ign	0.5
column switches	20 5	hazard sw 12v out	0.5
column switches	20 6	main beam switch sig	0.5
column switches	20 7	dip beam switch sig	0.5
column switches	20 8	column switch 49a	0.5
column switches	20 9	left turn sw out	0.5
column switches	20 10	right turn sw out	0.5
column switches	20 11	horn switch (to gnd)	0.5
column switches	20 12	column gnd	0.5
column switches	20 13	wiper column switch + (be)	1
column switches	20 14	wipe speed 1 (gn)	1
column switches	20 15	wipe speed 2 (rd)	1
column switches	20 16	wipe park (we)	1
column switches	20 17		
column switches	20 18	wash switch (to gnd)	0.5

GBS Factory Loom
pin outs for both column and instrument plugs

instruments & warning lamps	22 1	inst ign	1
instruments & warning lamps	22 2	instruments side	0.5
instruments & warning lamps	22 3	alt w/lamp	0.5
instruments & warning lamps	22 4	oil pressure w/lamp (yw)	0.5
instruments & warning lamps	22 5	main beam w/lamp	0.5
instruments & warning lamps	22 6	left turn w/lamp	0.5
instruments & warning lamps	22 7	right turn w/lamp	0.5
instruments & warning lamps	22 8	brake res w/lamp, handbrake w/lamp	0.5
instruments & warning lamps	22 9	tacho output signal	0.5
instruments & warning lamps	22 10	speedo sig +	0.5
instruments & warning lamps	22 11	speedo sig -	0.5
instruments & warning lamps	22 12	fuel level signal	0.5
instruments & warning lamps	22 13	speedo sig +ve	0.5
instruments & warning lamps	22 14		
instruments & warning lamps	22 15		
instruments & warning lamps	22 16	shift light driver (ecu)	0.5
instruments & warning lamps	22 17	oil pressure guage	0.5
instruments & warning lamps	22 18		
instruments & warning lamps	22 19	water temp guage	0.5
instruments & warning lamps	22 20	instruments gnd	1